


# 快速入门手册

# Quick Start Guide

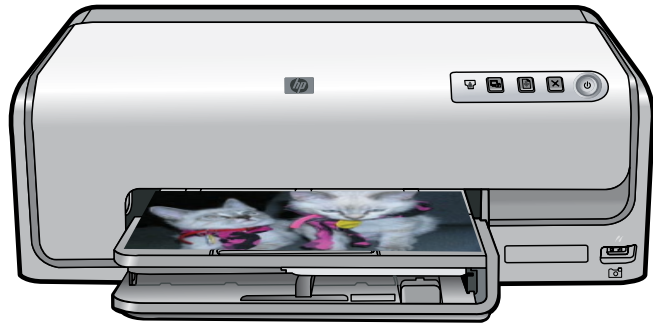


## HP Photosmart D6100 series



# 1

## 打开 HP Photosmart 打印机的包装

## Unpack the HP Photosmart printer

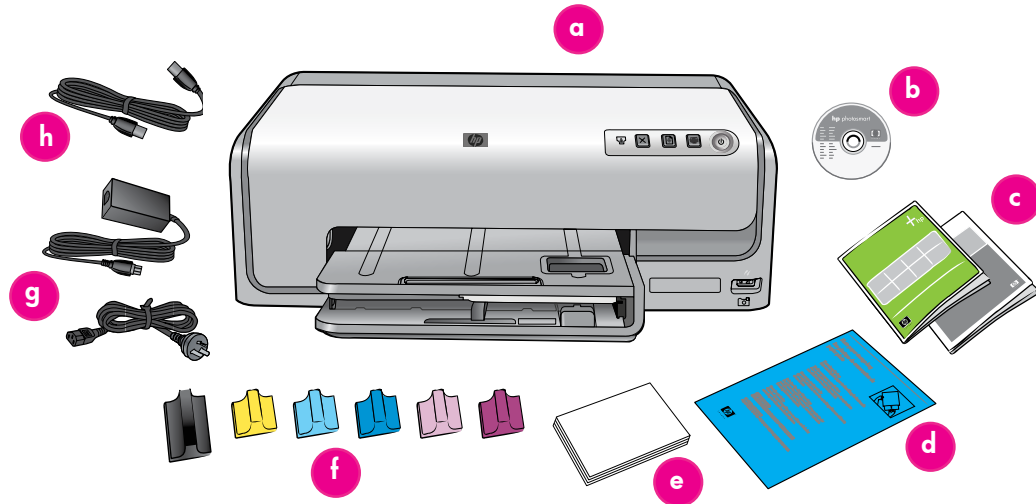

### 简体中文

感谢您购买 HP Photosmart 打印机！请仔细阅读本册子和其他附随的文档来帮助您开始使用您的打印机以及获得打印机的最佳性能。

1. **Windows 用户请注意：**等到将 CD 放入计算机后才连接 USB 电缆。
2. 拆除打印机内及周围的包装材料。
3. 检查包装箱内的物品。物品可能根据国家/地区而异。参照包装内容以了解实际包含的物品。
  - a. HP Photosmart D6100 series 打印机
  - b. HP Photosmart 软件 CD
  - c. 用户文档：《用户指南》和《快速入门手册》
  - d. 照片纸存储袋（仅在特定国家/地区提供）
  - e. 纸张样品
  - f. 六个墨盒
  - g. 电源线和电源供应器
  - h. USB 电缆（仅在特定国家/地区提供）

### English

Thank you for purchasing an HP Photosmart printer! Read this booklet and other accompanying documentation to help you get started and get the most out of your printer.

1. **Attention Windows users:** Wait to connect the USB cable until you insert the CD in the computer.
2. Remove the packaging from inside and around the printer.
3. Check the contents of the box. The contents may vary by country/region. Refer to the packaging for the actual contents.
  - a. HP Photosmart D6100 series printer
  - b. HP Photosmart software on CD
  - c. User documentation: User Guide and Quick Start Guide
  - d. Photo paper storage bag (only available in certain countries/regions)
  - e. Paper sampler
  - f. Six ink cartridges
  - g. Power cord and power supply
  - h. USB cable (only available in certain countries/regions)


# 2

## 仅连接电源

## Connect the power only


仅连接电源

Connect power only

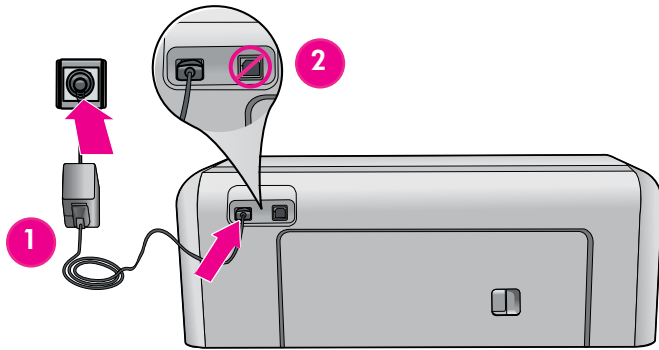

“电源”按钮

Power button

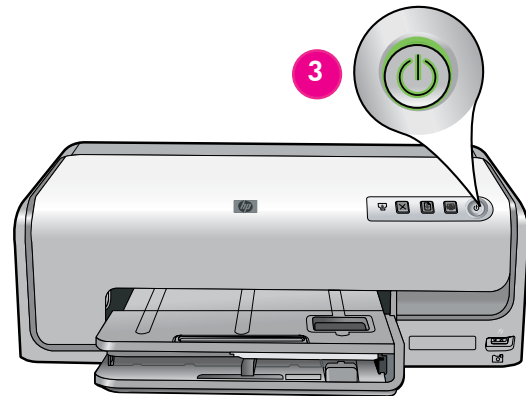

### 简体中文

1. 将电源供应器连接至电源线。将电源线连接到打印机和墙上插座。
2. 若打印机连接了 USB 电缆，请将它拔下。  
**Windows 用户请注意：** 等到将 CD 放入计算机后才连接 USB 电缆。
3. 按“**电源**”打开打印机电源。


### English

1. Connect the power supply to the power cord. Connect the power cord to the printer and to a wall outlet.
2. Disconnect the USB cable if it is plugged in to the printer.  
**Attention Windows users:** Wait to connect the USB cable until you insert the CD in the computer.
3. Press **Power** to turn on the printer.

# 3

## 装入普通纸

### Load plain paper

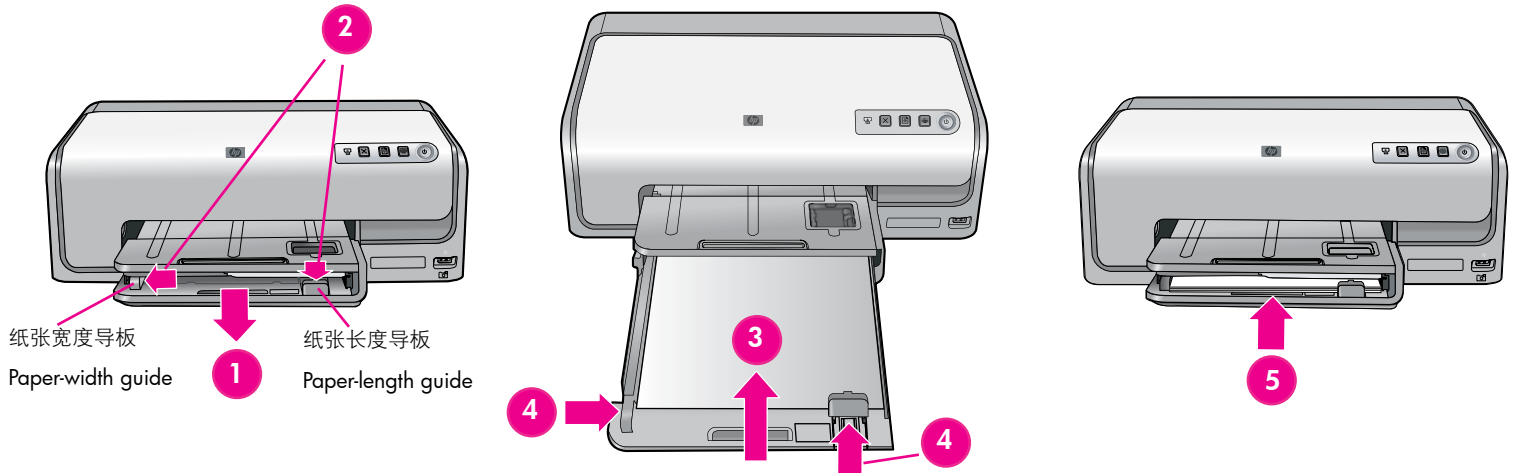

#### 简体中文

为获得最佳校准效果，装入**普通**纸以准备校准打印头。

1. 拉出以延长主纸盘。
2. 将纸张宽度和纸张长度导板滑到它们最远的位置。
3. 将几张**普通** letter 纸装入主纸盘。轻轻将纸张向前及向右推进，直至停住为止。

**注：**最多只能在纸盘中装入 150 张纸。

4. 将纸张宽度和纸张长度导板向纸张推进，直到它们停住在纸张边缘为止。
5. 推入主纸盘直到停住为止。

有关装入照片纸和打印照片的信息，请查阅本手册第 11 页或参阅《用户指南》。

#### English

For best calibration results, load **plain** paper in preparation for the print head alignment.

1. Pull to extend the main tray.
2. Slide the paper-width and paper-length guides to their outermost positions.
3. Place a few sheets of **plain** letter paper in the main tray. Gently slide the paper forward and to the right until it stops.

**Note:** Only fill the tray up to 150 sheets.


4. Slide the paper-width and paper-length guides toward the paper until they stop at the edges of the paper.
5. Push in the main tray until it stops.

For information about loading photo paper and printing photos, turn to page 11 of this booklet or see the User Guide.

# 4

## 安装墨盒

## Install the ink cartridges

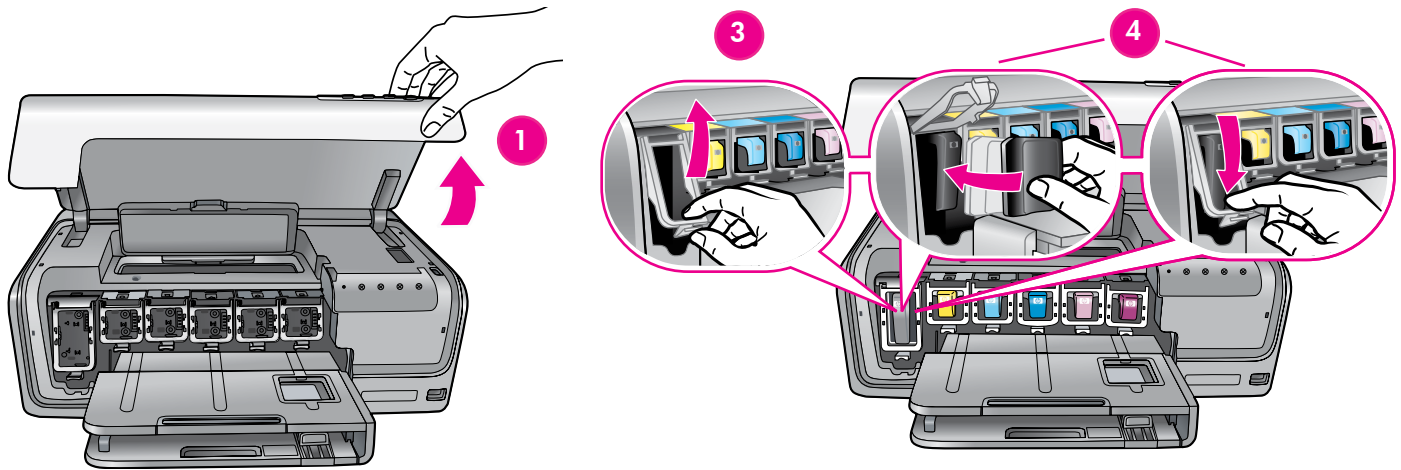

### 简体中文

**重要!** 仅使用打印机随附的墨盒。这些墨盒中的墨水经特别配方，可与打印头组件中的墨水混合。**如果墨水指示灯在墨盒安装期间不停闪烁，请浏览 [www.hp.com/support](http://www.hp.com/support) 以获取详细信息。请勿使用任何其他墨盒。**

1. 抬起主盖。
2. 拆开其中一个墨盒的包装。
3. 查找与墨盒颜色匹配的底座。挤压栓锁底部的弹片将它释放。
4. 插入相符的墨盒，然后合上门锁。
5. 重复上述程序，安装其他的墨盒。
6. 放下顶盖。墨盒初始化过程将自动开始。

**重要!** 安装第一个墨盒之后，将自动开始一次性初始化过程。这时发出机械噪音是正常现象，并会持续大约 4 分钟。请勿关闭或断开打印机。若发生这种情况，请参阅《用户指南》的故障排除一节。

### English

**Important!** Use only the ink cartridges that came with the printer. The ink in these cartridges is specially formulated to mix with the ink in the print head assembly. **If the ink light blinks continuously during cartridge installation, browse to [www.hp.com/support](http://www.hp.com/support) for more information. Do not use any other cartridges.**

1. Raise the main cover.
2. Unwrap one of the ink cartridges.
3. Locate the stall that matches the color of the ink cartridge. Squeeze the tabs at the bottom of the latch to release it.
4. Insert the matching ink cartridge, then close the latch.
5. Repeat this process to install the remaining cartridges.
6. Lower the top cover. The ink cartridge initialization process begins automatically.


**Important!** A one-time initialization process begins after the first ink cartridge installation. Mechanical noises are normal and last about 4 minutes. Do not turn off or disconnect your printer. If this happens, see the troubleshooting section of the User Guide.

# 5

Windows

## 安装 HP Photosmart 软件 (Windows)

## Install the HP Photosmart software (Windows)

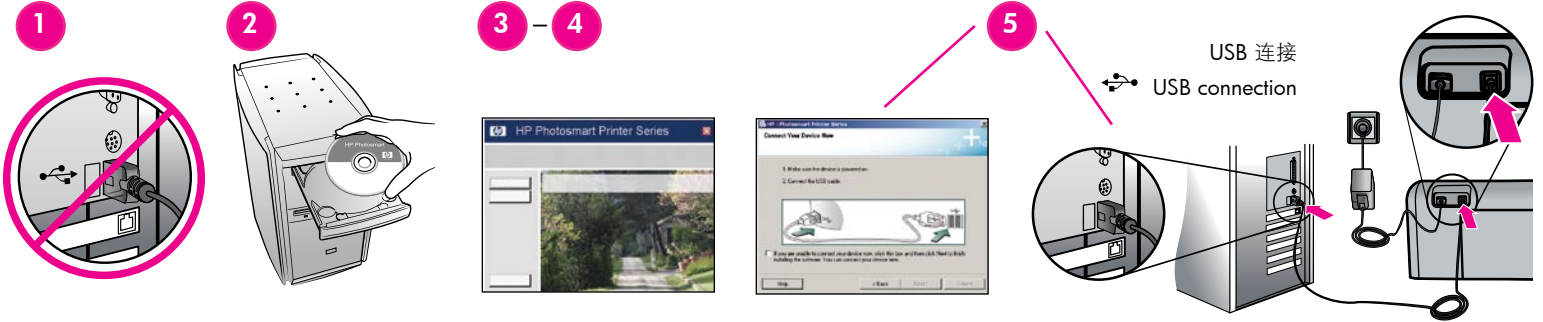

Windows

Windows

### 简体中文

Windows® 98、Me、2000 Professional、XP Home、XP Professional、x64 Edition

1. 若打印机连接了 USB 电缆，请将它拔下。  
**重要!** 等到将 CD 放入计算机后才连接 USB 电缆。
2. 放入 HP Photosmart CD。如果没出现指示，请查找并双击 CD 上的 **setup.exe** 文件。
3. 按照提示安装软件。
4. 当出现安装类型的提示时，选择 **Recommended (建议)** (HP Photosmart Premier) 或选择 **Custom (自定义)** 以选择 HP Photosmart Essential。  
**注:** Essential 是 Windows 98 和 Me 系统的唯一选项。特定软件功能仅受 HP Photosmart Premier 支持。
5. 当出现提示时，将 USB 电缆连接到打印机的背面。可能需要数分钟来建立连接和复制文件。
6. 出现 Congratulations (祝贺) 页面后，请单击 **Print a demo page (打印演示页)**。

**注:** 如果您在安装期间遇到问题，请参阅第 8-9 页的“安装故障排除”。

### English

Windows® 98, Me, 2000 Professional, XP Home, XP Professional, x64 Edition

1. Disconnect the USB cable if it is plugged in to the printer.  
**Important!** Wait to connect the USB cable until you insert the CD in the computer.
2. Insert the HP Photosmart CD. If instructions do not appear, locate and double-click the **setup.exe** file on the CD.
3. Follow the prompts to install the software.
4. When prompted for the installation type, choose **Recommended** (HP Photosmart Premier) or choose **Custom** to select HP Photosmart Essential.  
**Note:** Essential is the only option for Windows 98 and Me systems. Certain software features are supported by HP Photosmart Premier only.
5. When prompted, connect the USB cable to the back of the printer. It might take several minutes to establish a connection and copy the files.
6. When the Congratulations page appears, click **Print a demo page**.


**Note:** If you experience problems during installation, see Installation troubleshooting on pages 8-9.



# 5 Mac OS X

## 安装 HP Photosmart 软件 (Mac OS X)

## Install the HP Photosmart software (Mac OS X)

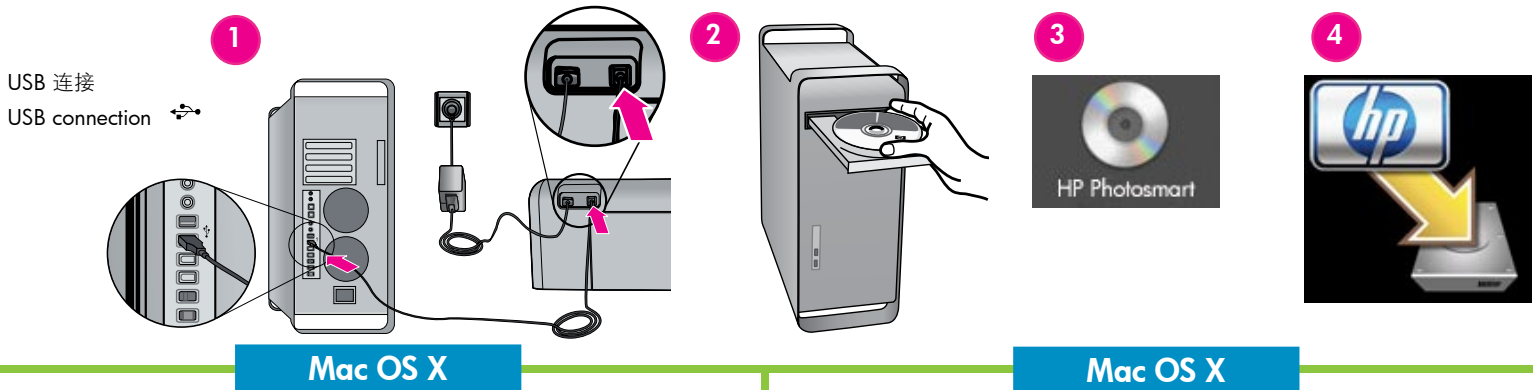

Mac OS X

Mac OS X

### 简体中文

#### Mac OS X 10.3、10.4 及更新版本

1. 将 USB 电缆连接到打印机和计算机。
2. 将 HP Photosmart CD 放入计算机。
3. 连接桌面上的 **HP Photosmart** CD 图象。
4. 连接 **HP Installer (HP 安装器)** 图象。“欢迎使用”页面将会出现。按照安装过程每一页的屏幕说明进行操作。
5. 出现“祝贺”页面时，点击**好**。

**注：**如果您在安装期间遇到问题，请参阅第 8-9 页的“安装故障排除”。

### English

#### Mac OS X 10.3, 10.4 and later

1. Connect the USB cable to the printer and to the computer.
2. Insert the HP Photosmart CD into the computer.
3. Double-click the **HP Photosmart** CD icon on the desktop.
4. Double-click the **HP Installer** icon. The Welcome page appears. Follow the onscreen instructions on each page of the installation.
5. When the Congratulations page appears, click **OK**.

**Note:** If you experience problems during installation, see Installation troubleshooting on pages 8-9.



# 安装故障排除

## Installation troubleshooting

### 简体中文

如果打印机软件安装失败，或安装软件后打印机与计算机无法正常通信，请在此页寻找可能的解决方案。

请检查打印机与计算机之间的所有电缆连接，并确保所用的打印机软件为最新版本。您可以拜访 HP 支持网站 [www.hp.com/support](http://www.hp.com/support) 获取最新的软件。如果仍需帮助，请查阅打印机文档。

### 仅限于 Macintosh

**问题：**安装打印机软件后，“Print Center”（打印中心）内的所有打印机都消失。

**解决方法：**卸载然后重新安装打印机软件。将打印机添加到“Print Center”（打印中心）前先重新启动计算机。

### 仅限于 Windows

**问题：**放入 CD 时安装软件没有自动启动。

**解决方法：**从 Windows “开始” 菜单，选择**运行**。单击**浏览**，然后浏览到您放入 HP Photosmart 软件 CD 的光盘驱动器。双击 **setup.exe** 文件。

**问题：**“找到新硬件向导” 成功打开但未能识别打印机。

**解决方法：**您可能在完成软件安装前连接 USB 电缆。拔下 USB 电缆。取消硬件安装向导。将软件 CD 放入您的光盘驱动器，然后按照屏幕上的说明进行操作。若未出现说明，请查找并双击 CD 上的 **setup.exe** 文件以重新启动安装。如果出现一则信息说明软件已成功安装，请选择**卸载**，然后按照说明重新安装软件。只有在软件安装过程中出现相应提示时才重新连接 USB 电缆。

**问题：**系统要求检查指出，计算机运行的 Internet Explorer 版本已过时。

**解决方法：**按键盘上的 **Ctrl + Shift**，然后在系统要求对话框中单击**取消**，忽略该提示并完成软件安装。安装 HP Photosmart 软件后必须立即更新 Internet Explorer，否则 HP 软件将不能正常工作。**注意：**更新 Internet Explorer 后，不必重新安装 HP 软件。

**问题：**计算机在软件安装过程中停止响应。

**解决方法：**可能是由于后台正在运行防毒软件或其他软件程序，因此减慢了安装进度。等待软件完成文件复制，此过程可能会占用几分钟。如果几分钟过后，计算机仍没有响应，请重新启动计算机，然后暂停或禁用所有运行中的防毒软件，并退出其他所有软件程序，再重新安装打印机软件。**注：**计算机重启后，防毒软件会自动重新打开。

**问题：**系统要求对话框在安装过程中出现。

**解决方法：**计算机系统的其中一个组件不符合最低系统要求。按照屏幕上的说明来修正问题，然后重新安装打印机软件。

### Windows 和 Macintosh

**问题：**计算机不能读取 HP Photosmart CD。

**解决方法：**确保 CD 没有污迹或划痕。如果其他 CD 均能正常工作，只有 HP Photosmart CD 例外，您的 CD 可能已损坏。您可以从 HP 支持网站下载该软件或向 HP 支持中心索取新的 CD。如果其他 CD 也不能工作，则可能需要维修光盘驱动器。





## English

If the printer software did not install successfully, or if the printer and computer are not communicating properly after software installation, check this page for possible solutions.

Check all cable connections between the printer and computer, and be sure you are using the most recent version of the printer software. You can acquire the latest software updates by visiting the HP support website at [www.hp.com/support](http://www.hp.com/support). If you still need help, check the printer documentation.

## Macintosh only

**Problem:** All of the printers in Print Center disappear after printer software installation.

**Solution:** Uninstall then reinstall the printer software. Restart the computer before adding the printer in Print Center.

## Windows only

**Problem:** The installation software does not start automatically when the CD is inserted.

**Solution:** From the Windows Start menu, select **Run**. Click **Browse**, and navigate to the CD-ROM drive where you inserted the HP Photosmart software CD. Double-click the **setup.exe** file.

**Problem:** The Found New Hardware Wizard opens but does not recognize the printer.

**Solution:** You might have connected the USB cable before completing the software installation. Disconnect the USB cable. Cancel the hardware installation Wizard. Insert the software CD into your CD-ROM drive, and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD to restart the installation. If a message appears saying the software has already been successfully installed, then select **Uninstall**, and follow the instructions to reinstall the software. Reconnect the USB cable only when prompted during software installation.

**Problem:** The system requirements check indicates that the computer is running an outdated version of Internet Explorer.

**Solution:** Press **Ctrl + Shift** on the keyboard and click **Cancel** in the System Requirements dialog box to bypass the block and complete the software installation. You must update Internet Explorer immediately after installing the HP Photosmart software, or the HP software will not work properly. **Note:** You do not have to reinstall the HP software after updating Internet Explorer.

**Problem:** The computer stops responding during software installation.

**Solution:** Virus protection software or another software program might be running in the background and slowing down the installation process. Wait while the software finishes copying files; this may take several minutes. If the computer is still not responding after several minutes, restart the computer, pause or disable any active virus protection software, quit all other software programs, and then reinstall the printer software. **Note:** Your virus protection software will turn back on automatically when you restart the computer.

**Problem:** The System Requirements dialog box appears during installation.

**Solution:** A component of the computer system does not meet the minimum system requirements. Follow the onscreen instructions to remedy the issue and then reinstall the printer software.

## Windows and Macintosh

**Problem:** The computer could not read the HP Photosmart CD.

**Solution:** Make sure the CD is not dirty or scratched. If other CDs work but the HP Photosmart CD does not, your CD might be damaged. You can download the software from the HP support website or request a new CD from HP Support. If other CDs do not work, you might need to service your CD-ROM drive.



# 打印第一张无边框照片

## Print your first borderless photo

# 1

不使用计算机的情形下打印照片

Print photos without a computer

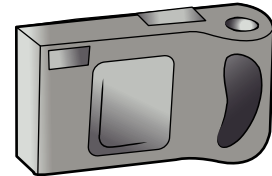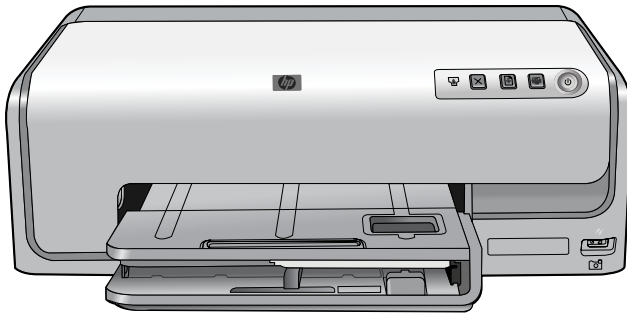

### 简体中文

HP Photosmart D6100 series 打印机可让您通过使用 USB 电缆将 PictBridge 数码相机直接连接到打印机来打印出色的照片。

要在不连接计算机的情况下进行打印，请按照下列简单的逐步操作说明执行。

有关无需使用计算机即可从数码相机打印照片的详细信息，请参阅《用户指南》。

### English

The HP Photosmart D6100 series printer allows you to print beautiful photos by connecting a PictBridge digital camera directly to the printer with a USB cable.



To print without connecting to a computer, follow these simple, step-by-step instructions.

For more information about printing photos from a digital camera without using a computer, see the User Guide.

# 2

## 装入 10 x 15 厘米 (4 x 6 英寸) 的照片纸

### Load 10 x 15 cm (4 x 6 inch) photo paper

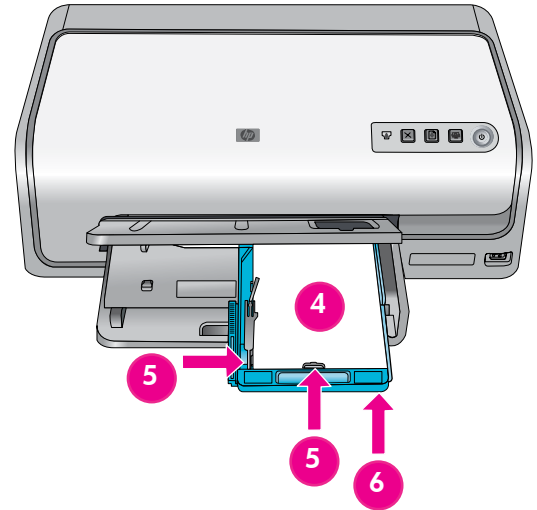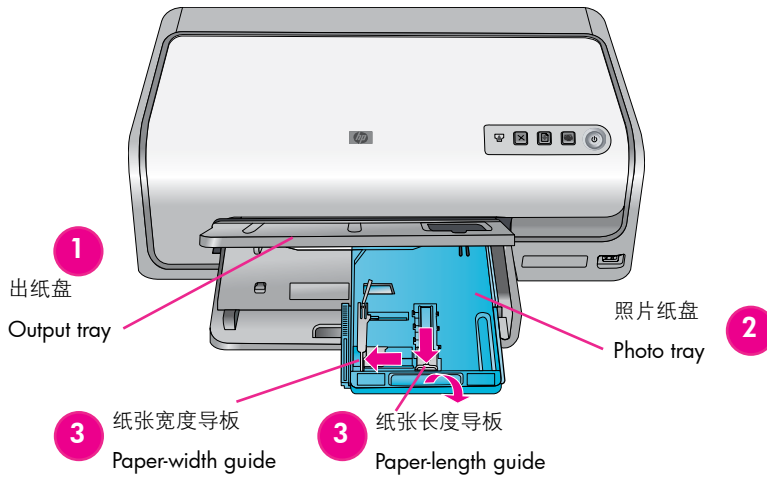

#### 简体中文

1. 抬起出纸盘。
2. 将照片纸盘拉向您直到停住为止。
3. 将照片纸盘纸张长度导板滑向您直到停住为止，然后将纸张宽度导板滑向左侧直到停住为止。
4. 在照片纸盘中放入多达 20 张 10 x 15 厘米 (4 x 6 英寸) 的照片纸，打印面朝下。轻轻将纸张向前及向右推进，直至停住为止。
5. 滑动纸张宽度和纸张长度导板至其紧靠纸张边缘，同时使纸张保持平整。
6. 推入照片纸盘，然后合上出纸盘。

**提示：**使用 HP 高级照片纸打印可防水和防手印的光面照片。照片纸背面独特的标记触动打印机中的自动纸张类型检测器，可进行快速、保存处理质量的照片打印。

有关在其他纸张尺寸上进行打印的详细信息，请参阅第 4 页的“装入普通纸”，或参阅《用户指南》。

#### English

1. Lift the output tray.
2. Pull the photo tray toward you until it stops.
3. Slide the photo tray paper-length guide toward you until it stops, and slide the paper-width guide to the left until it stops.
4. Place up to 20 sheets of 10 x 15 cm (4 x 6 inch) photo paper in the photo tray with the print side down. Gently slide the paper forward and to the right until it stops.
5. Slide the paper-width and paper-length guides against the edges of the paper without bending the paper.
6. Push in the photo tray and close the output tray.


**Tip:** Use HP Advanced Photo paper to print water- and fingerprint-resistant glossy photos. The unique marks on the back of the paper trigger the automatic paper-type sensor in the printer to produce fast, store-processed-quality photo printing.

For more information about printing on other paper sizes, see Load plain paper on page 4 or see the User Guide.

# 3

## 连接 PictBridge 相机

## Connect the PictBridge camera

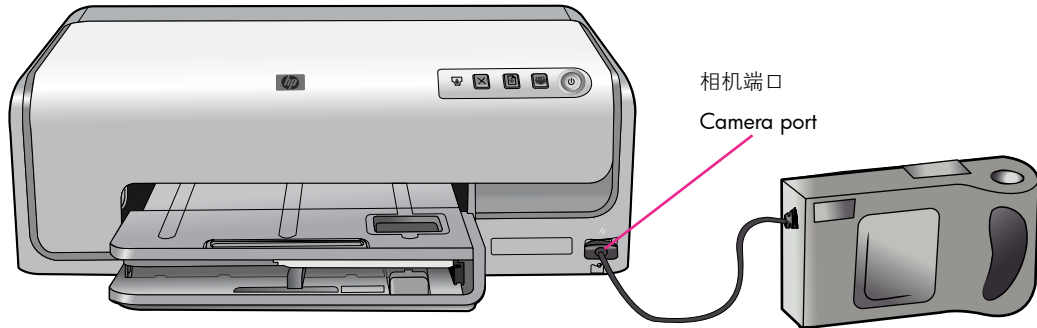

### 简体中文

1. 确保数码相机处于 PictBridge 模式。有关详细信息，请参阅相机随附的文档。
2. 使用相机随附的 USB 电缆将相机连接到打印机正面的相机端口。

### English

1. Be sure the digital camera is in PictBridge mode. For more information, see the documentation that came with the camera.
2. Connect the camera to the camera port on the front of the printer using the USB cable that came with the camera.

# 4

## 选择和打印照片

### Select and print a photo



#### 简体中文

1. 打开 PictBridge 兼容型数码相机的电源。
2. 选择您要打印的照片。有关详细信息，请参阅相机随附的文档。

**注：**打印机识别出 PictBridge 兼容型相机后，就会自动打印选定的照片。从数码相机打印时，打印机将使用已在相机上选择的设置。

有关在您的相机上使用 PictBridge 模式的详细信息，请参阅相机随附的文档。

#### English

1. Turn on the PictBridge-compliant digital camera.
2. Select the photos you want to print. For more information, see the documentation that came with the camera.

**Note:** When the printer recognizes the PictBridge-compliant camera, the selected photos print automatically. When you print from a digital camera, the printer uses the settings you selected on the camera.

For more information on using PictBridge with your camera, see the documentation that came with the camera.

# 快速提示

## Quick tips



# 1 使用计算机和 HP Photosmart 软件打印

## Print with a computer and HP Photosmart software



### 简体中文

使用 HP Photosmart 软件创建照片项目，您将可以随心所欲发挥创意。

- 利用数码照片设计日历、小册子和传单。
- 制作您自己的相册和纪念品。
- 手工定制 T 恤、CD 封面及相框。
- 使用 HP Photosmart 共享，通过电子邮件发送照片以及在线分享照片。

有关制作属于您自己的有趣项目的详细信息，请参阅“HP Photosmart 软件帮助”。

### English

The possibilities are endless when you use HP Photosmart software to create your photo projects.


- Design calendars, brochures, and flyers using your digital photos.
- Create your own photo albums and keepsakes.
- Craft custom T-shirts, CD covers, and picture frames.
- Use HP Photosmart Share to e-mail photos and to share photos online.

For more information about creating your own fun projects, see the HP Photosmart Software Help.

# 2

## 使用 Photosmart Express 按钮在计算机上打印

### Use the Photosmart Express button to print with a computer

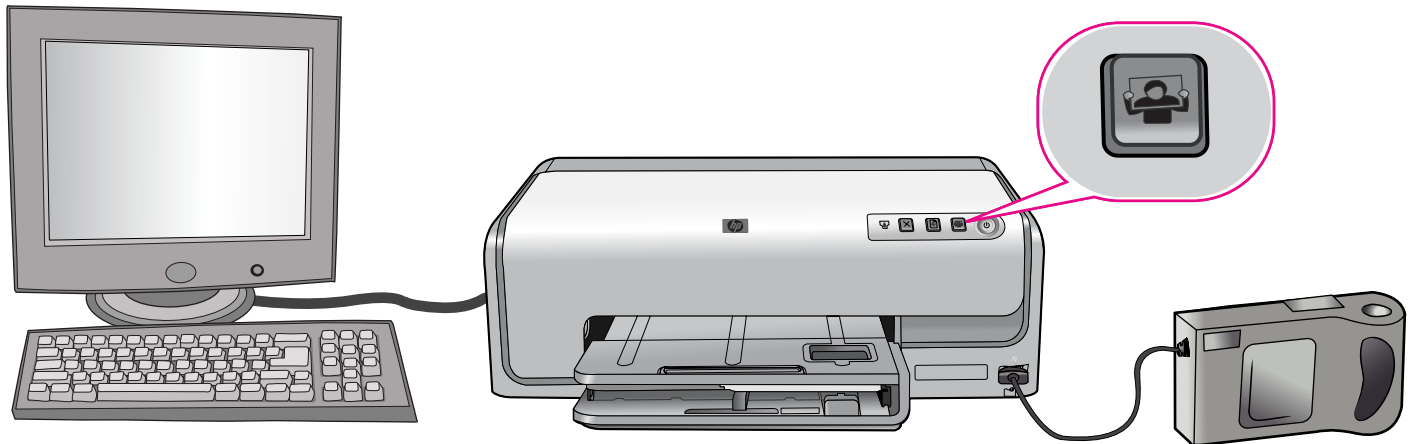

#### 简体中文

您可以从打印机上的 Photosmart Express 按钮快速轻松地启动 HP Photosmart 软件。

1. 确保您的打印机已连接到计算机和相机。
2. 按 Photosmart Express 按钮。
3. HP Photosmart 软件将在您的计算机屏幕上打开，以帮助您打印照片。
4. 有关直接从您的相机创建有趣项目的详细信息，请参阅“HP Photosmart 软件帮助”。


#### English

You can quickly and easily launch HP Photosmart software from the Photosmart Express button on your printer.

1. Be sure your printer is connected to both your computer and your camera.
2. Press the Photosmart Express button.
3. HP Photosmart software opens on your computer screen to help you print your photos.
4. See the HP Photosmart Software Help for more information on creating fun projects right from your camera.

# 需要更多信息?

## Need more information?

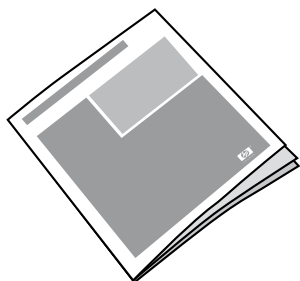

请阅读《用户指南》以获得关于打印机功能的说明、故障排除信息，以及如何使用您的全新 HP Photosmart 打印机执行特殊打印任务的说明。

Read the User Guide for a description of the printer features, troubleshooting information, and explanations of how to perform specific printing tasks using your new HP Photosmart printer.



查阅“HP Photosmart 软件帮助”以获得打印机随附软件的使用信息。该屏幕帮助已随您的软件安装。

Check the HP Photosmart Software Help for information about using the software that came with your printer. The onscreen help is installed with your software.



HP 支持网站与电子支持: [www.hp.com/support](http://www.hp.com/support)  
介质与打印耗材: [www.hpshopping.com](http://www.hpshopping.com)

HP support website and E-support: [www.hp.com/support](http://www.hp.com/support)  
Media and printing supplies: [www.hpshopping.com](http://www.hpshopping.com)

[www.hp.com](http://www.hp.com)



C9089-90018



新加坡印刷。5/06 • v1.0.0  
Printed in Singapore. 5/06 • v1.0.0

© 2006 Hewlett-Packard Development Company, L.P.

