


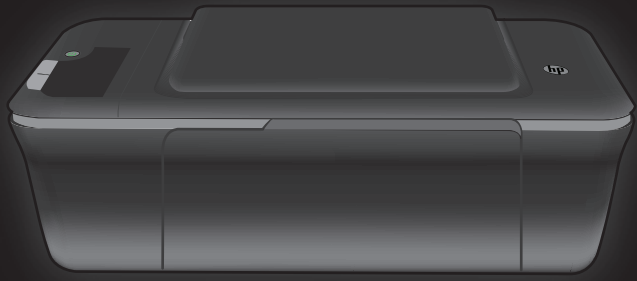


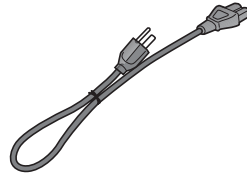


DESKJET 2000 PRINTER J210 SERIES

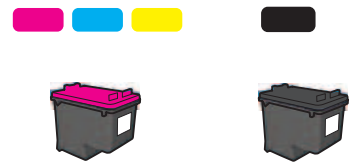

从这里开始
Start Here
Mulai Dari Sini

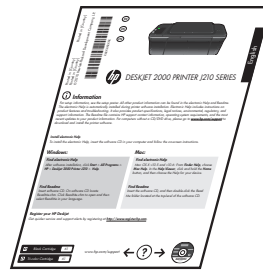

CH390-90005

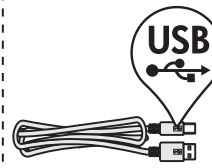

可能需要单独购买 USB 电缆。

You might need to purchase a USB cable separately.


Anda mungkin perlu membeli kabel USB secara terpisah.

ZH-CN

EN

ID


1

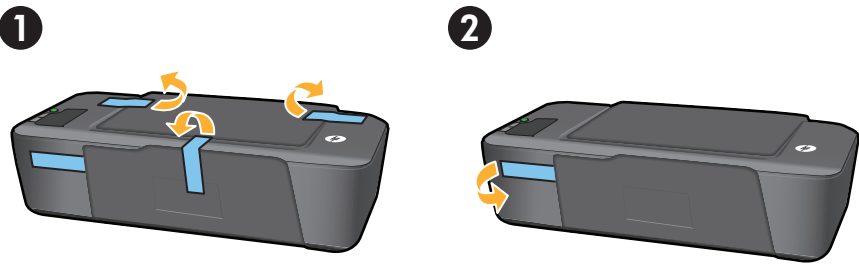


移除胶带和硬纸板。

Remove tape and cardboard.

Lepaskan pita dan papan kardus.

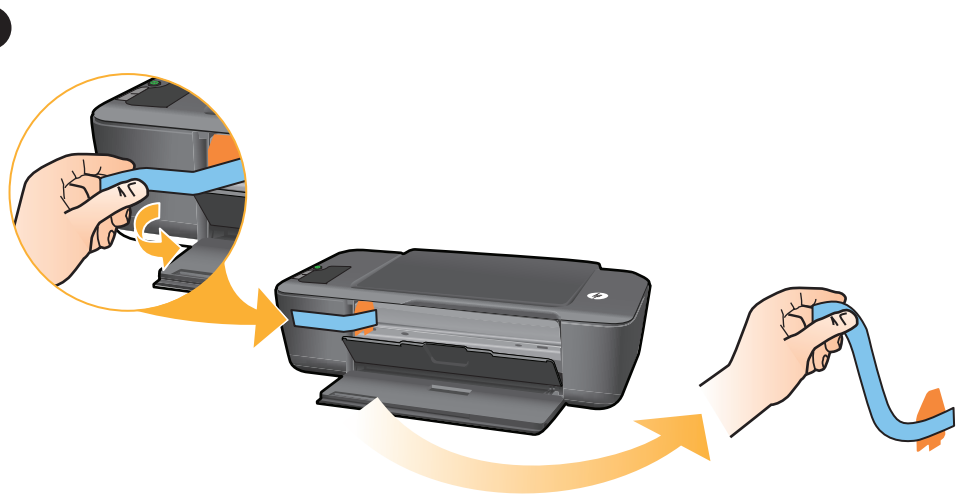

2

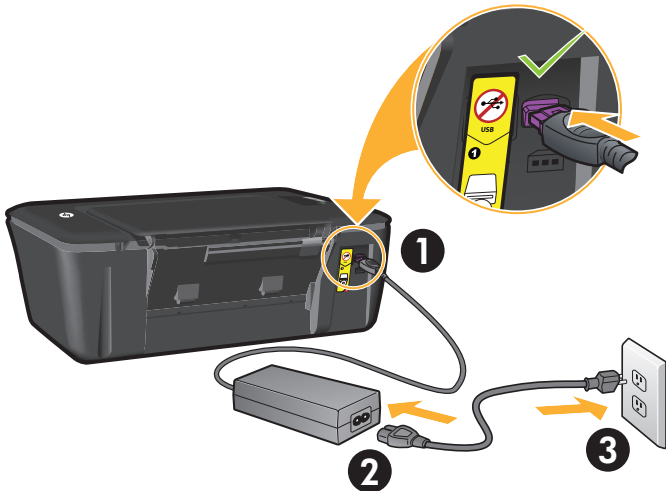


连接电源。请勿连接 USB。

Connect power. **Do not connect USB.**

Hubungkan kabel daya. **Jangan hubungkan USB.**

3

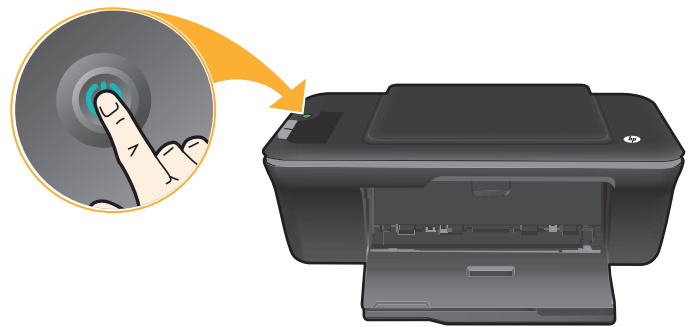

按 “开/关机”按钮。

Press On button.

Tekan tombol Hidup.

4



抬起进纸盒。

Raise input tray.


Angkat baki masukan.



拉出纸盒延长板。

Pull out tray extender.

Tarik keluar pemanjang baki.

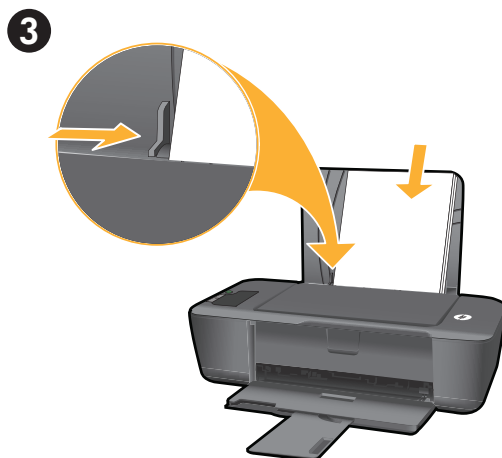

滑动导轨。放入白纸。

Slide guide. Load white paper.

Geser pemandu kertas. Muatkan kertas putih.

5




打开墨盒门。

Open cartridge door.

Buka pintu kartrid.

6 1

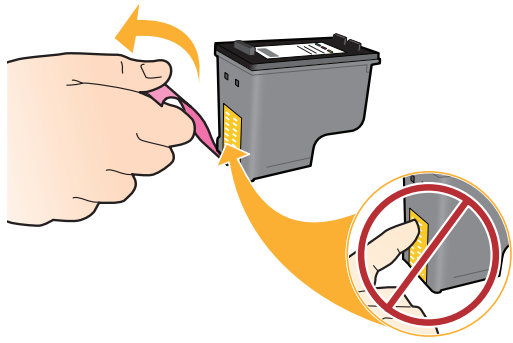


拉住粉色小片，撕掉透明胶带。

Pull pink tab to remove clear tape.

Tarik tab merah muda untuk melepaskan pita bening.

2

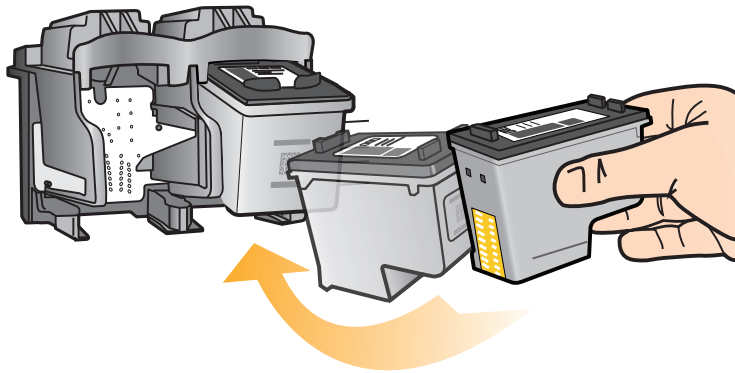


将墨盒推入托架，直到卡入到位。

Push both cartridges into carriage until they snap.

Dorong kedua kartrid ke dalam kereta sampai terkunci.

3

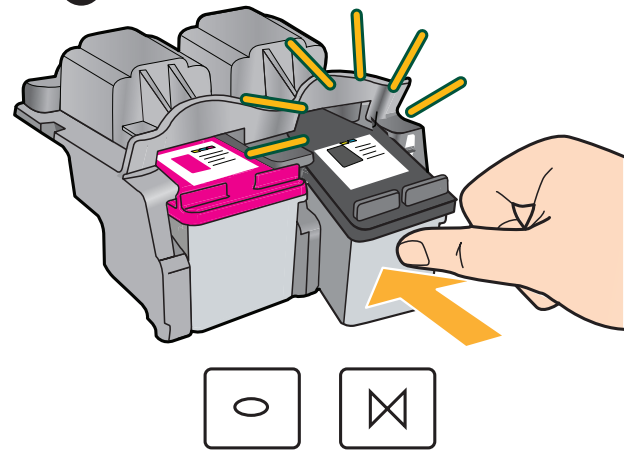

7



关闭墨盒门。


Close cartridge door.

Tutup pintu kartrid.


8

Windows:

1

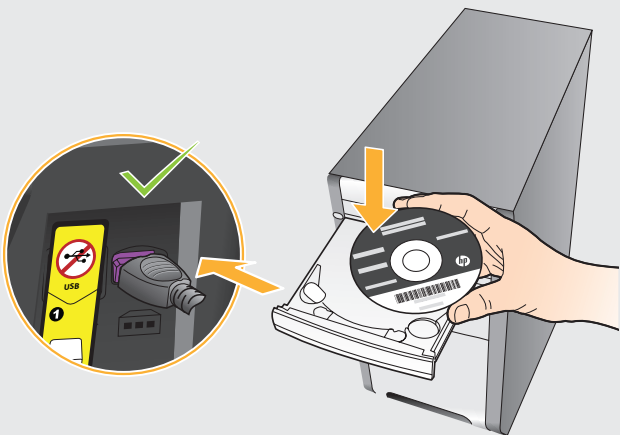

2

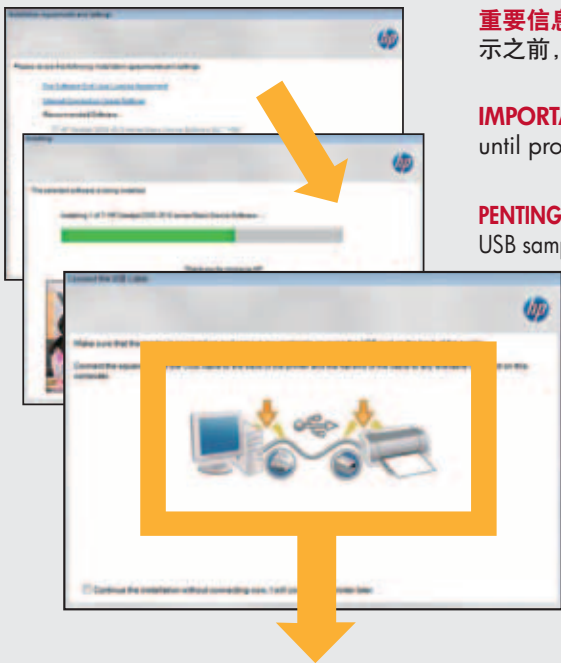


重要信息: 在屏幕上没有出现提示之前，请勿连接 USB。

IMPORTANT: Do not connect USB until prompted on screen.


PENTING: Jangan hubungkan kabel USB sampai diperintahkan pada layar.

3

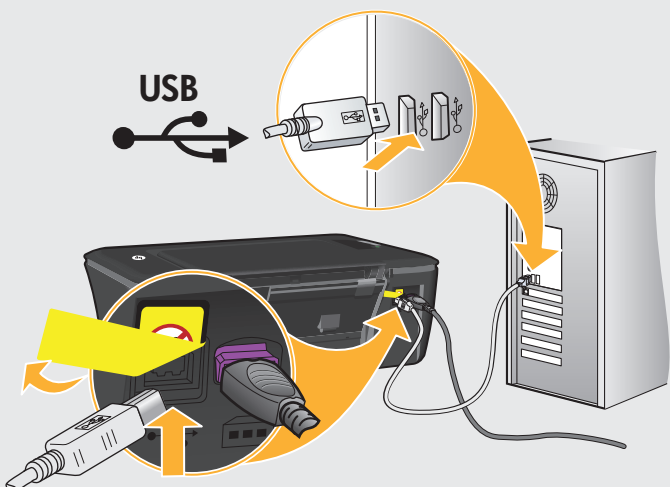


Mac:


1

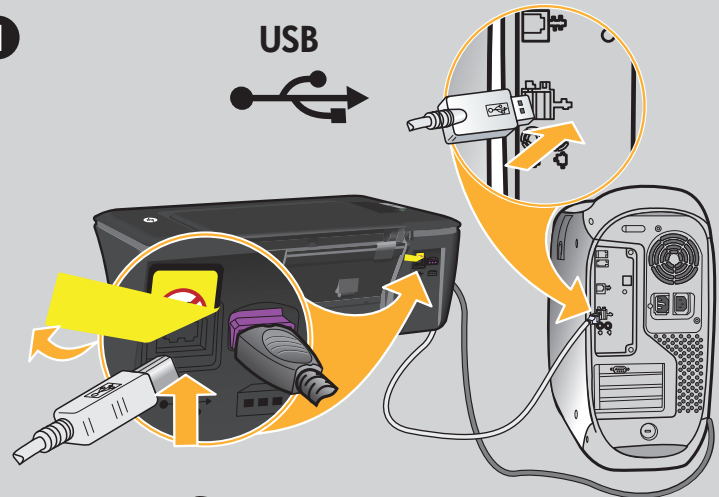

2

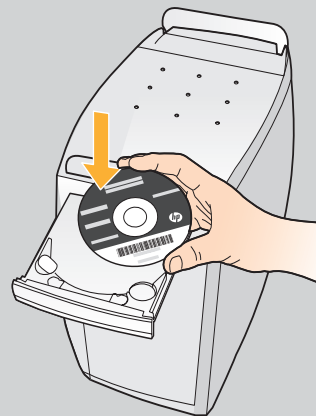

3

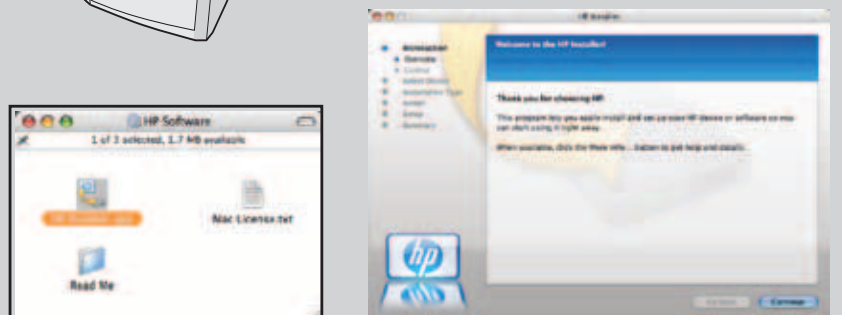

如果计算机没有 CD/DVD 驱动器，请转至 www.hp.com/support 以下载和安装该打印机软件。

For computers without a CD/DVD drive, please go to www.hp.com/support to download and install the printer software.

Untuk komputer yang tidak dilengkapi kandar CD/DVD, kunjungi www.hp.com/support untuk mengunduh dan menginstal perangkat lunak printer.

© 2010 Hewlett-Packard Development Company, L.P.

Printed in English
Printed in Simplified Chinese

www.hp.com



www.hp.com/support